


# How to Reset RF KEY FOB Remote Controls that have a Pairing Button

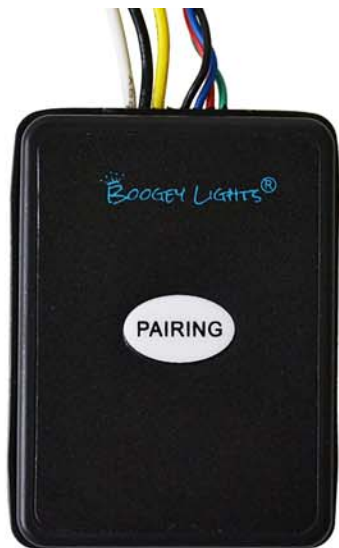

These instructions will work for any Boogey Lights® controller that has a PAIRING button on the controller as shown in this photo.

## Trouble Shooting Notes

If after attempting to pair your KEY FOB to the controller using these STEP-BY-STEP directions you are unable to get your KEY FOB to pair to the controller, do the following:

1. Make sure the key press indicator on the KEY FOB is lighting when you press a button on the KEY FOB. If not, the battery inside the KEY FOB needs to be replaced (standard watch battery).
2. Disconnect the controller from the 12vdc power source for at least one minute, then re-connect and repeat pairing process. In some instances you can disconnect just the positive side (e.g. remove the fuse) but in other cases you have to completely disconnect BOTH the positive and the negative power connections that run from the 12vdc power source to the controller.
3. If after trying steps 1 and 2 above you are still unable to pair your remote with the controller (and you have confirmed the controller is wired correctly with a good fuse with 12vdc power ON), the controller itself may be damaged. Contact technical support for further assistance.

## Step-By-Step Directions

Typically, the controller and remotes will stay paired. If however you accidentally press the pairing button while the controller is powered on, you will delete the pairing and have to pair your KEY FOBs with the controller. Follow these steps to reconnect them:

**Step 1:** Press the PAIRING button on the controller box quickly and release. Do not hold it down.

On the PLUS and COMBO controller versions you'll notice the pairing button is back-lit with a red light. This indicates the controller is in pairing mode.

**Step 2:** Immediately press and release the LOCK button on the first Key Fob. The LOCK button is the top left button. When you press the LOCK button the key press indicator should light up on the Key Fob.

**Step 3:** Press each button on the Key Fob to test the various functions. If all works properly then you are all set. If not repeat step 1, 2 and 3 or review trouble shooting notes.

**Step 4:** To pair a second remote repeat steps 2 and 3 above.

## RF WIRELESS KEY FOB



- 1: Lock
- 2: Unlock
- 3: Lightning Bolt
- 4: Bell

**If you put the controller in PAIRING MODE and fail to push the KEY FOB button within 10 seconds the controller will exit pairing mode and the existing pairing, if any, will be erased.**

One controller can pair with two remote FOBs. If you attempt to pair with more than 2 the controller will cancel out the first paired remote.



7505 Sussex Drive Suite 114, Florence, KY, 41042  
www.boogeylights.com Phone: 800.847.1359